



PRE LAUNCH CHECK-LIST



Engine Maintenance

Refer to your engine operator's manual for details.

OUTBOARD ENGINE	INBOARD ENGINES
-----------------	-----------------

- Clean, re-gap or replace spark plugs
- Inspect and test ignition components
- Replace in-line fuel filters
- Momentarily pressurize fuel system and inspect
- Inspect carburetor and primer system.
- Remove propeller and check condition
- Clean and lubricate the propeller shaft
- Drain and refill gear case oil
- Check lubricant level in power trim/tilt reservoir
- Lubricate all components of engine
- Follow steering system equipment manufacturer's maintenance and lubrication recommendations
- Clean and inspect oil reservoir and pickup filter on models with oil injection
- Check engine carefully, make sure screws & nuts are tight, replace any damaged or worn parts
- Remove any rust, repaint if necessary
- Apply proper primer then apply touch up paint
- Apply a coat of protective wax to engine cover
- Remove carbon deposits from combustion chambers
- Inspect Shear Pins and Propeller
- Inspect all engine gauges
- Degrease engine if necessary

- Change engine oil.
- Check generator oil level
- Replace oil filter
- Replace fuel Filters
- Check/Replace transmission fluid level
- Clean crankcase ventilation system
- Clean transmission oil strainer screen
- Check cooling system hoses & connections
- Tighten engine mount fasteners
- Check for loose, damaged or missing parts
- Check water pick-up and water impellers
- Check accessory drive belts
- Change antifreeze
- Clean air Filters, replace if necessary
- Check zinc's in heat exchanger
- Check seawater strainers & seacocks.
- Remove, Clean, Inspect, and properly gap spark plugs
- Check/replace spark plug wires
- Adjust the carburetor if not fuel injected
- Drain diesel water traps in oil and fuel lines
- Bleed diesel fuel systems following filter changes
- Add fuel additives
- Remove rust and apply touch up paint
- Inspect Steering and Throttle linkages
- Replace engine oil zorb pad if needed
- Inspect the entire boat steering system

Battery Maintenance	
---------------------	--

- Fully charge batteries before installing
- Check and top off fluid levels on every cell
- Coat terminals with silicone grease or other anti-corrosive product

- Check battery condition with a hydrometer
- Remove the cable terminals and clean (replace if necessary)
- Be sure batteries are secured in acid-resistant boxes and well tied down.

PRE LAUNCH SUPPLY CHECKLIST

CLEANING

- All Purpose Cleaner
- Sponges or Mitts
- Brushes
- Buckets
- Stain Removers
- Fiberglass Cleaner
- Oxidation Remover
- Rubbing Compounds
- Polishing Pads
- Gel Coat Repair Kit
- Hull Cleaner
- Fiberglass Polish
- Fiberglass Wax
- Sail and Canvas Cleaner
- Hose and Nozzle
- Metal Polish
- Canvas Water Repellent
- Vinyl Window Cleaner
- Plexiglas Cleaner/Polish
- Cloths and Rags
- Chamois
- Teak Cleaner
- Bronze Brush & Wool
- Teak Oil
- Bilge Cleaner
- Oil Absorbent Pads
- Fiberglass Color Restorer
- Boat Wash & Deck Cleaner
- Mildew Cleaner/Remover

PAINTING

- Primer & Paint
- Fairing Compound
- Spray Gun for Paint
- Tack Rags
- Varnish
- Thinners
- Disposable Coveralls
- Safety Goggles
- Gloves
- Respirator
- Cleaning Solvent
- De - Waxer
- Sanding Discs & Sandpaper
- Scrapers
- Drop Cloths
- Tape
- Paint Rollers
- Roller Trays
- Paint Buckets
- Resins
- Fiberglass Cloth
- Caulk
- Caulk Gun
- Adhesives
- Sealant
- Brushes
- Paint Mixer
- Sanding Block
- Paint Strainer

ENGINE

- Spark Plugs
- Electrical Grease
- Spark Plug Wires
- Fuel Filters
- Fuel Hoses& Fittings
- Engine Cleaner & Degreaser
- Carburetor Cleaner
- Carbon Free Additive
- Propeller Shaft Seals
- Propeller
- Prop Removal Tools
- Gear Oil
- Lower Unit Lubricant
- Grease Cartridges
- Lower Unit Pump
- Grease Gun
- Transmission Fluid
- Hydraulic Oil
- Power Tilt/Trim Fluid
- Cable Cleaner/Lubricant
- Fuel Additives
- Outboard Paint
- TCW-3 Oil
- Engine Motor Oil
- Oil Filters
- Oil Change Pump
- Drain Plugs
- Impellers
- Heat Exchange Zincs